



## **STEP 2 :**

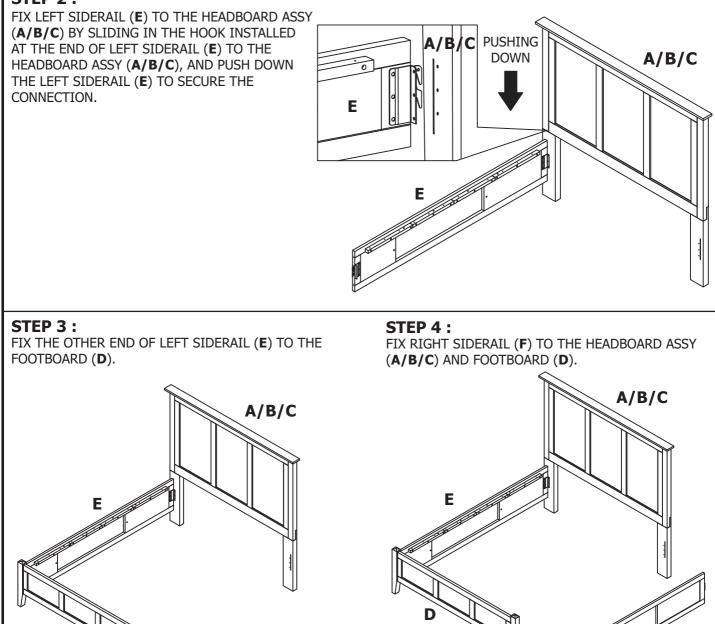

#### **STEP 5 :**


SECURE BOTH SIDERAILS (**E,F**) TO THE HEADBOARD ASSY (**A/B/C**) AND FOOTBOARD (**D**) USING ROUND HEAD SCREWS (**1**)

AS SHOWN IN THE ILLUSTRATION.

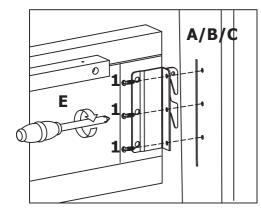


#### **STEP 6 :**

REMOVE PLASTIC COVER FROM STORAGE FEETS (**J**) BOLT. FOLLOW THE ILLUSTRATION TO FIX STORAGE FEETS (**J**) TO STORAGE (**I**).

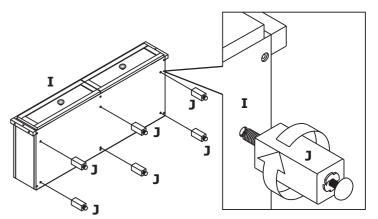


## **STEP 7 :**

FOLLOW THE ILLUSTRATION TO FIX STORAGE (I) TO LEFT SIDERAIL (E) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS.

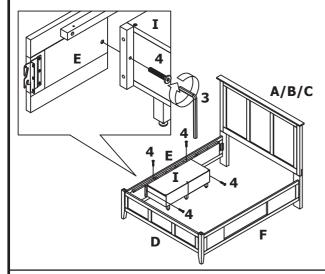


#### **STEP 9 :**

ARRANGE CENTER SLAT (**G**) SO THAT T-NUTS ARE FACING THE FLOOR. SLIDE ALLEN BOLTS (**4**) FROM TOP OF CENTER SLAT (**G**) INTO THE 2ND, 5TH, 6TH, AND 9TH PREDRILLED HOLES. FIX LONG LEG SUPPORT (**H**) TO CENTER SLAT (**G**) USING ALLEN BOLTS (**4**) AND ALLEN KEY (**3**).

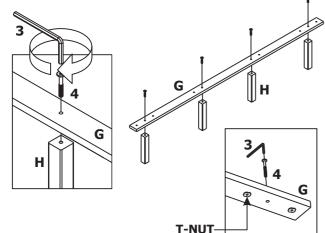

## STEP 11 :


FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (**K**)ON THE BED FRAME. SPREAD BED SLATS (**K**) ON BED FRAME. FIX 1ST, 6TH, 7TH, AND 12TH BED SLATS TO BED FRAME USING WOOD SCREWS (**2**). USE PILOT HOLES ON SIDERAILS (**E**,**F**) AS REFERENCE FOR CORRECT PLACEMENT.

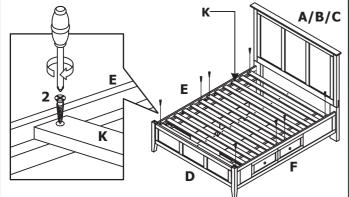

### **STEP 8 :**


FIX STORAGE (I) TO RIGHT SIDERAIL (F) USING ALLEN BOLTS (4).


TURN LEVELER UNDERNEATH STORAGE FEETS (**J**) TO ADJUST THE STORAGE (**I**) LEVEL AS SHOWN ON ILLUSTRATION.

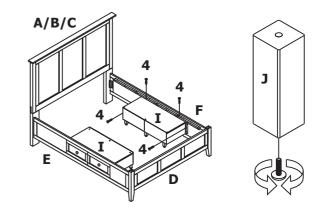

#### **STEP 10 :**

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (**K**). SLIDE CENTER SLAT (**G**) UNDER BED SLATS (**K**). SLIDE ALLEN BOLTS (**4**) FROM TOP OF BED SLATS (**K**) THROUGH PRE-DRILLED HOLES ON 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH BED SLATS. TIGHTEN ALLEN BOLTS (**4**) WITH ALLEN KEY (**3**) TO SECURE BED SLATS (**K**) TO CENTER SLAT (**G**).

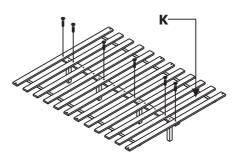

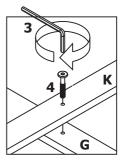

#### **INSTRUCTIONS FOR ADJUSTING LEVELERS:**

POSITION THE BED IN YOUR ROOM LOCATE LEVELERS UNDER EACH CENTER LEG (**H**).


TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.


# **MAINTENANCE INSTRUCTIONS:**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

UPDATED : MARCH 28TH, 2012

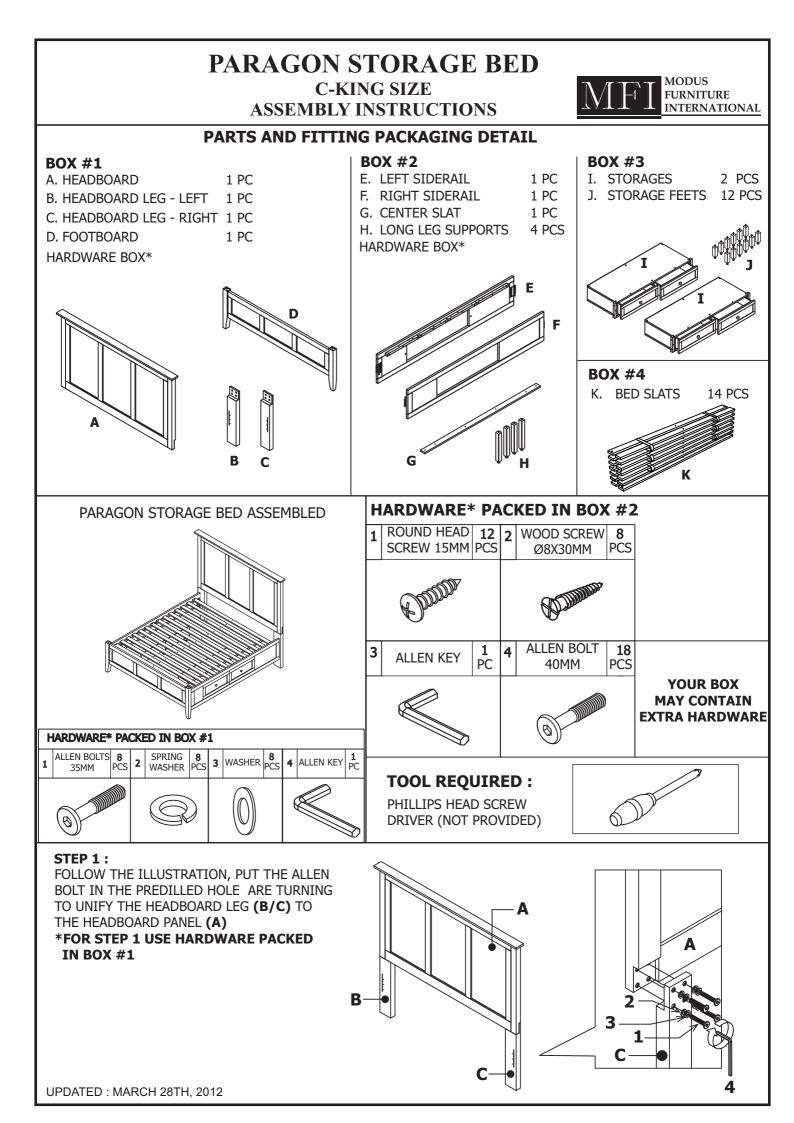


## **STEP 2 :**

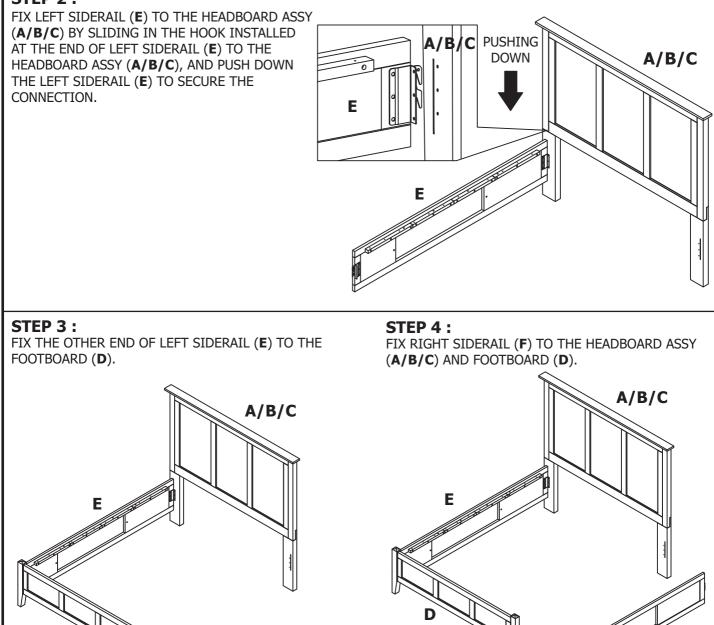

#### **STEP 5 :**


SECURE BOTH SIDERAILS (**E,F**) TO THE HEADBOARD ASSY (**A/B/C**) AND FOOTBOARD (**D**) USING ROUND HEAD SCREWS (**1**)

AS SHOWN IN THE ILLUSTRATION.

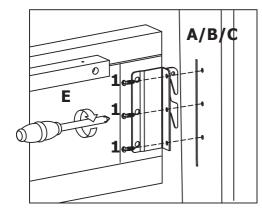


#### **STEP 6 :**

REMOVE PLASTIC COVER FROM STORAGE FEETS (**J**) BOLT. FOLLOW THE ILLUSTRATION TO FIX STORAGE FEETS (**J**) TO STORAGE (**I**).

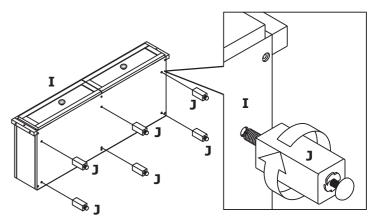


## **STEP 7 :**

FOLLOW THE ILLUSTRATION TO FIX STORAGE (I) TO LEFT SIDERAIL (E) USING ALLEN BOLTS (4). USE ALLEN KEY (3) TO TIGHTEN THE BOLTS.

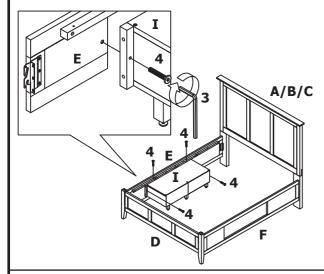


#### **STEP 9 :**

ARRANGE CENTER SLAT (**G**) SO THAT T-NUTS ARE FACING THE FLOOR. SLIDE ALLEN BOLTS (**4**) FROM TOP OF CENTER SLAT (**G**) INTO THE 2ND, 5TH, 6TH, AND 9TH PREDRILLED HOLES. FIX LONG LEG SUPPORT (**H**) TO CENTER SLAT (**G**) USING ALLEN BOLTS (**4**) AND ALLEN KEY (**3**).

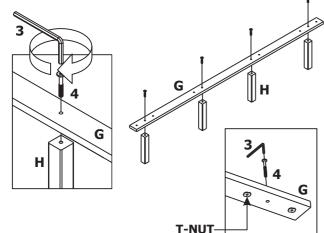

## STEP 11 :


FOLLOW THE ILLUSTRATION TO PLACE THE BED SLATS (**K**) ON THE BED FRAME. SPREAD BED SLATS (**K**) ON BED FRAME. FIX 1ST, 7TH, 8TH, AND 14TH BED SLATS TO BED FRAME USING WOOD SCREWS (**2**). USE PILOT HOLES ON SIDERAILS (**E,F**) AS REFERENCE FOR CORRECT PLACEMENT.

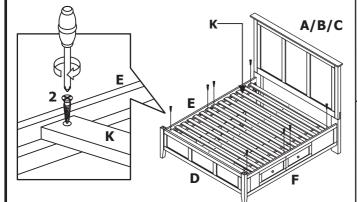

### **STEP 8 :**


FIX STORAGE (I) TO RIGHT SIDERAIL (F) USING ALLEN BOLTS (4).

TURN LEVELER UNDERNEATH STORAGE FEETS (**J**) TO ADJUST THE STORAGE (**I**) LEVEL AS SHOWN ON ILLUSTRATION.

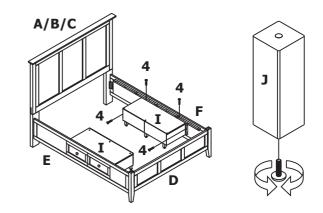

#### **STEP 10 :**

FOLLOW THE ILLUSTRATION TO SPREAD OUT ALL THE BED SLATS (**K**). SLIDE CENTER SLAT (**G**) UNDER BED SLATS (**K**). SLIDE ALLEN BOLTS (**4**) FROM TOP OF BED SLATS (**K**) THROUGH PRE-DRILLED HOLES ON 1ST, 2ND, 5TH, 10TH, 13TH AND 14TH BED SLATS. TIGHTEN ALLEN BOLTS (**4**) WITH ALLEN KEY (**3**) TO SECURE BED SLATS (**K**) TO CENTER SLAT (**G**).

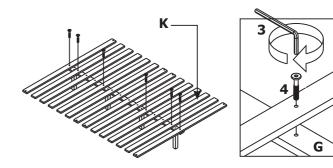

#### **INSTRUCTIONS FOR ADJUSTING LEVELERS:**

POSITION THE BED IN YOUR ROOM LOCATE LEVELERS UNDER EACH CENTER LEG (**H**).

TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.

# **MAINTENANCE INSTRUCTIONS:**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

UPDATED : MARCH 28TH, 2012